



THE PERFORMANCE YOU NEED

Universal Home Theater Remote

Please read this user's guide before using your new remote.

User's Guide

15-304



Package contents

- Remote Control
- Code List
- User's Guide
- Quick Start

Features

- Fully backlit keypad is easily visible in the dark.
- Learning mode lets you use your existing remote to capture specific key functions.

1 Install Batteries

Remove the battery cover and insert two AAA batteries (not included) by matching the polarity symbols (+ / -) marked inside, then replace the battery cover.

Battery Notes

- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (alkaline, or

rechargeable), or rechargeable batteries of different capacities.

- If you do not plan to use the remote for more than one week, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

2 Set up

You can set up the remote by using the brand code for your device, performing an automatic search, or performing a manual search. Check the **Code List** to locate the 3-digit code for your device.

Use the Brand Code

- Power on the device.
- Press **SET** and the device key (**TV**, **VCR/DVD**, or **SAT/CBL**) simultaneously. The red LED lights.
- Enter the 3-digit code (for example, 451 or 489 for an Auvio TV). The LED blinks after each number and turns off if successful.
- Press various keys to make sure other remote functions work.

Power Turn on or off a selected device.

Device keys Select a device to control.

SET Enter setup for the remote.

EXIT Exit menu and go back to viewing.

VOL +/- Adjust the volume.

0-9 Directly enter channels.

Sub Access sub channels on a TV or receiver.

TV Control your VCR or DVD player. These functions are the same as those on the device's original remote.

LEARN

Copy the codes from another remote control.

MENU

Display the menu for the selected device.

MUTE

Turn off the sound.

LAST

Press to return to the last channel.

GUIDE

Display the program guide.

CH +/-

Select the next or previous channel.

ASPECT

Change viewing options (4:3 or 16:9).

SLEEP

Set the sleep timer.

INPUT

Select the video inputs.

CC

Closed caption options.

Notes:

- If the code number is incorrect, the red LED blinks twice. Return to step 3 and try another code.
- If you've entered a code and some keys on your new remote don't work, try the next 3-digit code listed for your device.
- If you want to quit during device setup, press the device key or wait 10 seconds for the remote to exit setup automatically.

Auto Search

If your device's code isn't listed in the Code List, or your remote doesn't work as instructed in "Use the Brand Code," follow the steps below to automatically search for your device.

- Power on the desired device. If it is a VCR, insert a tape.
- Point the remote control toward your device, then press and hold **SET** and the device key simultaneously for at least 3 seconds.

3. The red LED blinks slowly while the remote searches. The device switches itself off when the code is found.

4. Once the device turns off, press any key (except **SET**) immediately to confirm the code.

5. If the automatic search does not find the code for your device, try the steps under "Manual Search," which takes longer. Automatic search stops after one search cycle, approximately 18 minutes for TV, 20 minutes for DVD/VCR/DVR, 9 minutes for satellite or cable, and 13 minutes for other devices.

Notes:

- Since action is required during automatic search, you must stay with the device for the duration of the process or you might miss the code and have to repeat the process.
- If you miss the code during the automatic search, press **SET** to change search direction to get the code more quickly.

6. Press **Power** to turn on the device and check other remote functions.

Notes:

- If some keys still don't work properly, repeat steps 2-4 to restart the search for a suitable code.
- To stop searching, press any key (except **SET**) to quit search. The red LED turns off and search stops.
- During search, you can press **SET** to change search direction from forward to backward or vice versa.

Manual Search

- Power on the desired device. If it is a VCR, insert a tape.
- Point the remote control toward your device, then press **SET** and the device key simultaneously. The red LED lights.
- Press **Power** until the device turns off, then press the appropriate device key quickly to confirm the code.
- Press **Power** to turn the device back on.

5. Check the other function keys (except **⏻**). If all the keys work properly, press the device key to save the correct code. If the keys don't work properly, repeat steps 2 through 5 to try another code.

Verify Your Code

For each digit in your code, press **SET** and the **1**, **2**, or **3** buttons on your remote. The red LED flashes to represent each number of the code. For example, for code "018," the LED does not flash when you press **1**, flashes once when you press **2**, and flashes 8 times when you press **3**.

1. Press the device key (for example, **TV**), then press **SET** and **1** simultaneously for the first digit of the three digit code.
2. Press **SET** and **2** simultaneously for the second digit.
3. Press **SET** and **3** simultaneously for the third digit.

Lock Device

To lock the code into a particular device key and prevent it from being changed accidentally:

1. Press the device key for the device that you want to lock.
2. Hold down **SET** and **7** simultaneously. The red LED blinks twice. The device key is now locked.
3. To unlock the code, press and hold **SET** and then press **8**. The red LED blinks twice. The code is unlocked.

 **Note:** Make sure you press the right device key before you lock it.

Lock Volume and Mute

To lock the volume and mute functions so they work with only one device:

1. Press the device key.
2. Hold down **SET** and press **5** simultaneously. The red LED blinks twice. The volume and mute keys are locked to the current device.

3. To unlock, press and hold **SET** and then press **6** simultaneously. The red LED blinks twice. The volume key and mute key are unlocked and will work with other devices.

Learn Key Functions

Follow these steps to map key functions from other remote controls.

1. Place the original remote in front of your Auvio remote at a distance of about 1.2 in (3 cm).



2. Press **LEARN** and the device key (for example, **AUD**) simultaneously.
3. Press the key (for example **⏻**) on your Auvio remote to be learned, then press the matching key on the original remote.
4. The LED on your Auvio remote flashes three times and then

lights for one second if learning is successful. The LED continues to flash every second while you select of other keys to learn.

5. Repeat step 3 for each key you want to learn.



Notes:

- For best performance of the learning function, use fresh batteries in the original remote control.
- All keys can be learned except the device keys, the **SET** key and other function keys (for example, **LEARN**). The remote can save up to 14 keys.
- A key can be mapped multiple times repeatedly with the last content saved.
- You need to erase the learned content of the keys when you want to use another similar device, for example, two differently branded TV sets.
- To exit the learning process, press the **LEARN** key, or wait 10 seconds for the remote to exit learn mode automatically.

Erase Learned Settings

To erase learn setting for one device, press the device key (for example, **TV**), then press **SET** and **4** simultaneously. The LED flashes twice.

Reset the Remote Control

Hold down **SET** and 0 until the red LED blinks three times to reset the remote.

Specifications

Supported Equipment
TV/DVD/SAT/VCR/CBL/AUD/DVR/AUX
 Power2 AAA batteries
 Battery lifeup to 120,000 hrs

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Ignition L.P. may cause interference and void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the

property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at: Ignition L.P., 3102 Maple Ave. Suite 450, Dallas, TX 75201 02/09

For product support, call
1-866-315-0426



Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

Get more from your audio and video equipment. See what you've been missing. With Auvio, **you control the experience.**

Auvio was established by a group of technophiles to provide **high quality audio and video products** without the high sticker price. The Auvio philosophy is for you to experience audio and video as it was intended to be: **pure and distortion free.**

We know electronics can be intimidating. Auvio **simplifies your experience** by providing the right products, with the right specs, to work with your equipment.

Be confident about your purchase: your new Auvio product incorporates the **latest technology**, is built to the **highest quality standards**, and **reduces environmental impact** by complying with RoHS environmental restrictions.